



# Quick Reference Card


Please consult your spa user manual for complete info on the features of your spa system.



## in.k500™ intuitive color keypad

The in.k500 is built with all the great features you've come to love in the in.k800, but in a smaller package. It is discreet, compact, and unobtrusively beautiful. Save space without losing out on function.

### Description

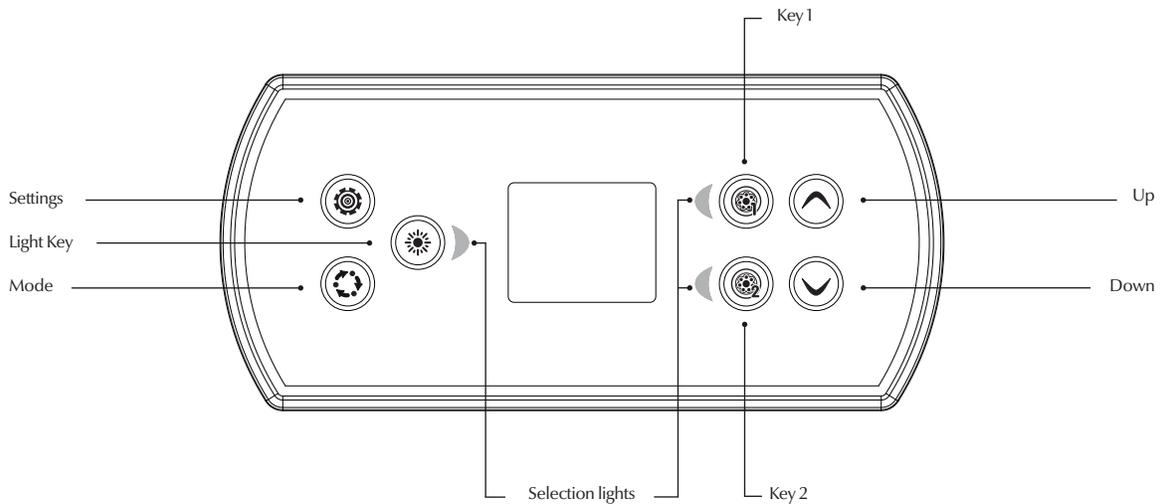

*\*Functions for keys 1 and 2 will depend on your system's low level configuration.*

### Main functions



#### Power

Press any button to turn the keypad on.  
After 30 minutes without activity it will shut off.

#### Main screen

The main screen gives you access to your accessories and water temperature. At the bottom of the screen you will see any error or maintenance messages that are present.



#### Start or stop accessories

To start or stop an accessory, press the associated button. Icons will become animated when their accessory is turned on, and inanimate when turned off. Icons on the screen will reflect the speed or state of the devices running on your spa.

When an accessory has more than two states, press the button until it reaches the desired state.



#### Water temperature

The temperature shown at the top of the screen gives the actual water temperature.

Use the Up and Down buttons to set the desired temperature. The set point will appear in blue at the bottom. After 3 seconds without any change to the set temperature value, the keypad will resume the normal display of messages.

## Settings



### Settings

From the home page you can access the Settings, where you will find:

Water care  
Audio (if installed)  
Day & time  
Keypad  
Config\*  
Restore\*  
About

Use the arrow keys to move up and down in the list. To select an option, press the lit button beside it (Light button).

At any point you can press the Settings button to return to the home screen.

\*reserved for qualified electricians installers



### Water care

The Water Care section will help you set up your ideal filtration and heating settings. Choose a mode depending on your need.

Use the Light key to choose your setting. A checkmark will appear on the selected icon to confirm.

In Energy Savings mode, the set point will be reduced by 20°F\*, which means that the heating system will not be engaged unless the temperature falls to 20°F below the spa's set temperature.

\*Default pack value

### Water care modes



#### Away:

In this mode the spa will always be in economy; the set point will be reduced by 20° F and filtration will be reduced.



#### Beginner:

The spa will never be in economy mode, and will run a normal 8 hours of filtration a day.



#### Energy Savings:

The spa will be in economy mode during the peak hours of the day and resume normal mode on the weekend.



#### Super Energy:

The spa will always in economy mode during peak hours, every day of the week.



#### Weekender:

The spa will be in economy mode from Monday to Friday, and will run normally on the weekend.



### Modifying schedules

Use the arrow keys to scroll through the Water Care selections. To see and/or modify a Water Care category, use the lit button to the right (key 1) to open the selected Water Care menu.

Use the arrow keys to choose a schedule to modify (choice of economy and filtration schedules). Use the Light key to move between parameters.

You have several possibilities for the schedule (Mon-Fri, weekend, every day, or single days). The schedules will be repeated every week. The time and duration are set in 30 minute increments. Once you have set the schedule, use key 1 to go back. Ensure that you have selected the desired Water Care option in the main Water Care menu.

If your spa uses a circulation pump configured to run 24 hours, the screen will show you the purge setting instead of filtration. The purges are pre-programmed for a fixed number of minutes, therefore the duration will be set to N/A on the screen, and only the start time can be modified.



### Audio (with in.stream only)

The in.k500 can be used with either the in.tune or in.stream audio system. The Audio section in the Settings menu gives you the option to disconnect or unpair your Bluetooth enabled device when using the in.stream.

The Mode key (audio access) is only present/functional when the spa is equipped with a Gecko audio component (in.stream or in.tune). The keypad will be set appropriately at the factory.

The Audio option will only appear in the Settings menu for keypads that are set up for an in.stream connection.



### Day and time

Here you can adjust the time format, and change the day and time. Use the arrows to choose the setting that you want to adjust, and select it by pressing the Light key. Use the arrow buttons to change the parameters, and the Light key to move between parameters.

Key 1 will take you back to the main Settings menu.



### Keypad settings

In this section you can change the temperature unit and language. Use the arrow keys, and move to the setting that you would like to change. Use the Light key to choose, and then the arrow keys to modify.



### About

This section shows information about the in.k500 software number, and the revision numbers of the different components of your system.

## Audio operation



### in.tune operation

Press the Mode key to access your in.tune.

#### Play/Pause audio

Press the Play/Pause key to start or pause the audio.

#### Adjusting the volume

Press the Up or the Down key to increase or decrease the volume.

#### Changing tracks

Use the Last Track and Next Track keys to change tracks for the CD or AUX input. When in Radio mode, the Last Track and Next Track keys will move through preset radio stations on the selected band. To change bands or preset stations, see your in.tune manual.



### in.stream operation

Press the Mode key to access your in.stream.

#### Play/Pause audio

Press the Play/Pause button to start or pause the audio

#### Adjusting the volume

Press the Up or the Down key to increase or decrease the volume.

#### Changing tracks

Use the Last Track and Next Track keys to change tracks

#### Disconnect or Unpair Bluetooth

These options can be found under the Audio section in the Settings menu.

